Kofferträger
YAMAHA FZ 1 Fazer ab 2006

Artikel-Nr.:
650.4522.00 01 schwarz

Lock it System

Montage

HEPCO & BECKER

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	704.079HB	Kofferträger, links
1	704.080HB	Kofferträger, rechts
1	704.294HB	Adapterbügel
1	704.295HB	Blinkerhalter
1	704.296HB	Adapterlasche unten links
1	704.297HB	Adapterlasche unten rechts
1	704.298HB	Adapterlasche oben links
1	704.299HB	Adapterlasche oben rechts
1	704.300HB	Querbügel
2	150.892	Linsenkopfschraube M 8 x 45
2	150.886	Linsenkopfschraube M 8 x 40
2	150.923	Linsenkopfschraube M 8 x 30
2	150.891	Linsenkopfschraube M 8 x 25
4	151.139	Sechskantschraube M 6 x 12
2	150.784	Inbusschraube M 8 x 30
4	150.761	Inbusschraube M 6 x 16
6	151.070	Lock-it Systemschraube
6	151.071	Lock-it Sicherungsscheibe
8	150.809	U-Scheibe ø6,4
8	150.810	U-Scheibe ø8,4
2	150.995	U-Scheiben ø8,4 x 3mm
2	150.811	U-Scheiben ø10,5
2	150.706	Karosseriescheiben ø8,4 x ø30
2	150.986	Karosseriescheiben ø6,4 x ø18
4	150.799	Selbstsichernde Mutter M6
2	150.800	Selbstsichernde Mutter M 8
2	150.803	Tensilockmutter M8

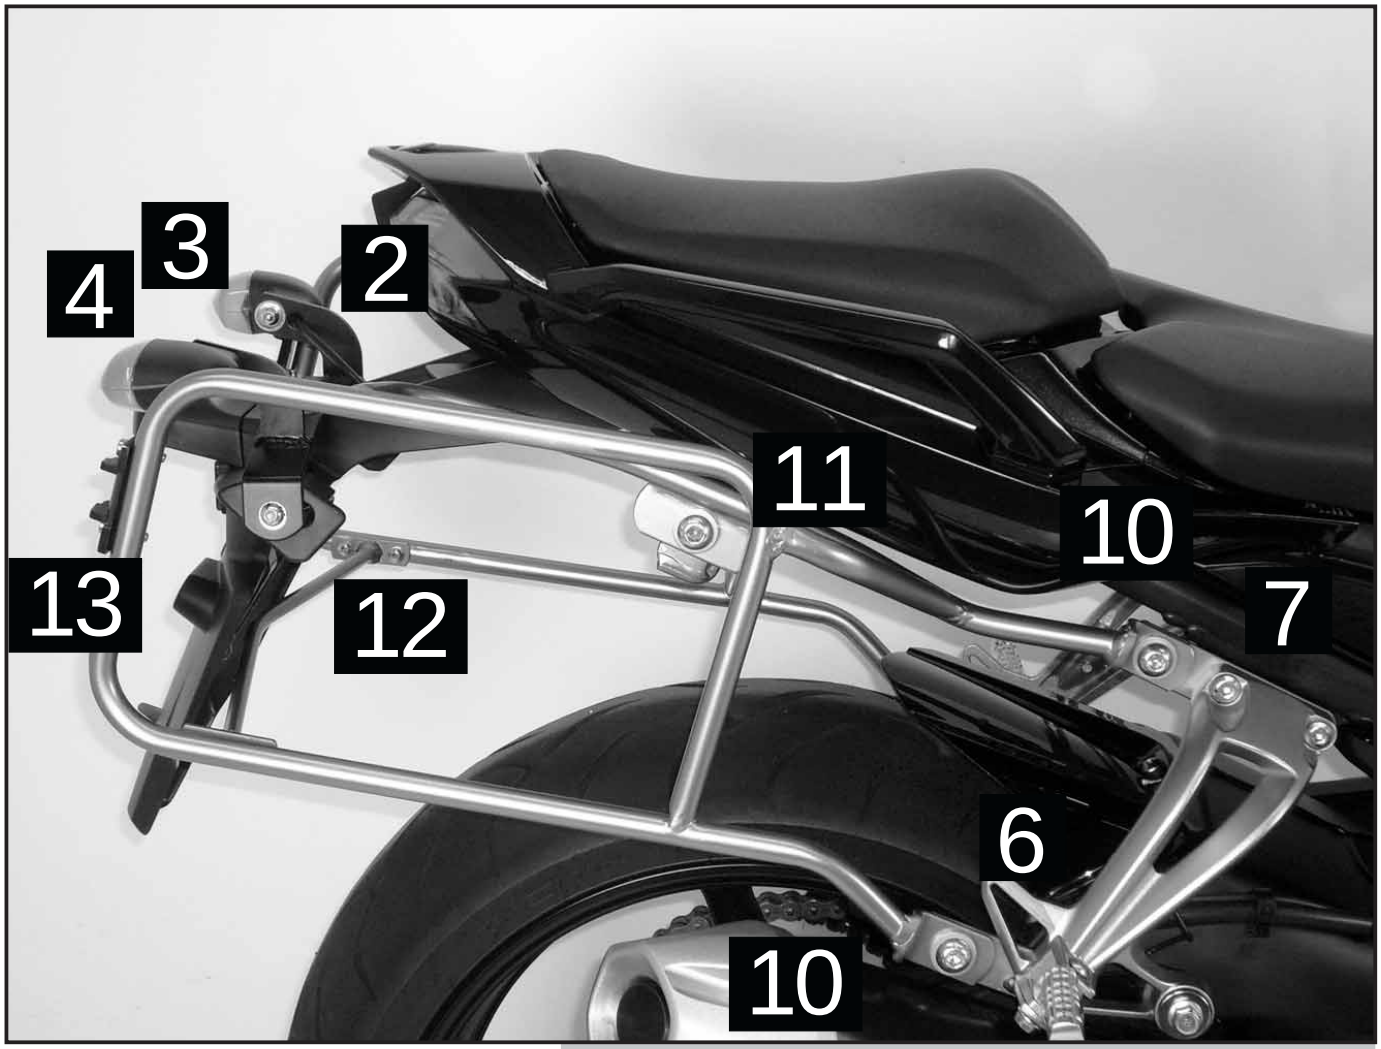

Kofferträger
YAMAHA FZ 1 Fazer ab 2006

Artikel-Nr.:
650.4522.00 01 schwarz

Montage

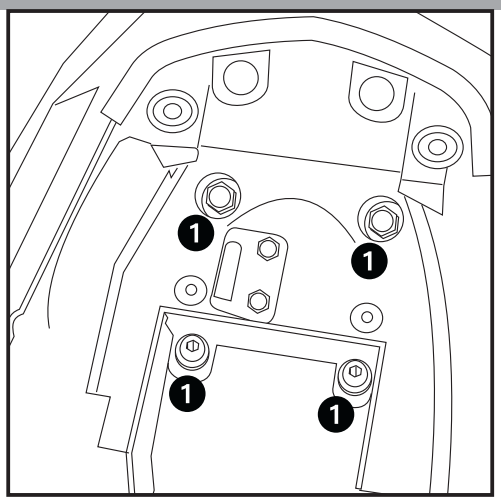

1

Vorbereitung:
Soziussitz demontieren.
Den Nummernschildträger mit den Blinkern demontieren, dazu die Schrauben ❶ unter der Sitzbank lösen.

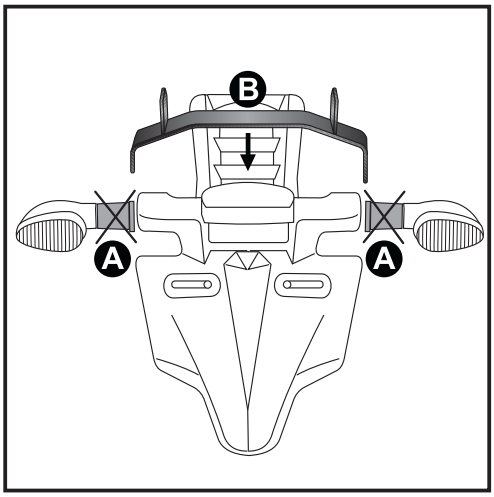

2

Befestigung des Blinkerhalters:
Die Blinker demontieren. Die Gummiteile Ⓐ der Blinker demontieren; sie entfallen.
Der Blinkerhalter Ⓑ wird an der Originalposition der Blinker plaziert.

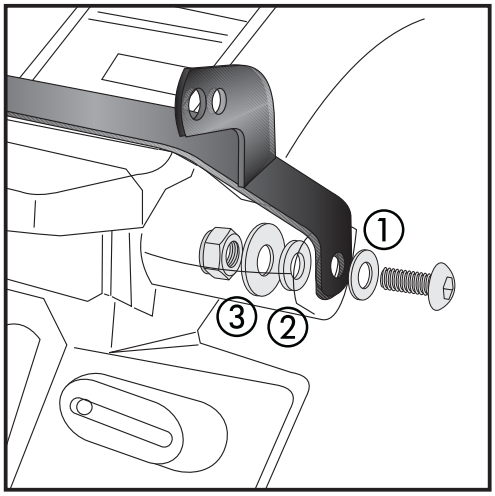

3

Befestigung des Blinkerhalters:
Zur Montage von innen zuerst die U-Scheiben ø8,4 x 3 mm dick einlegen, dann folgen die Karosseriescheiben ø8,4 x ø30 innen.
Zur Befestigung die Linsenkopfschrauben M 8 x 25 mit U-Scheiben ø8,4 und selbstsichernde Muttern M 8 verwenden.

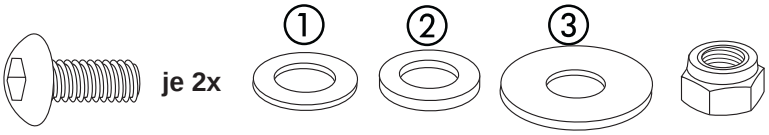

Montage

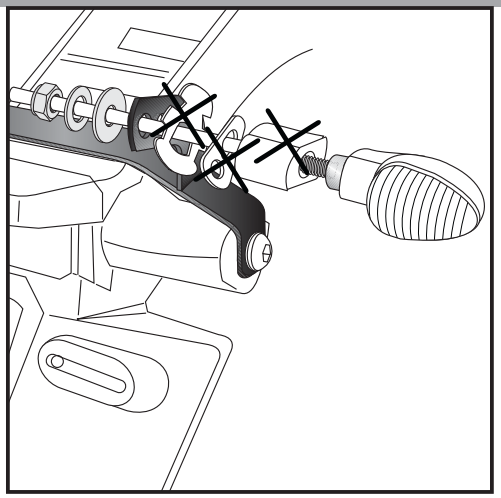

4

Befestigung des Blinker:

Am zuvor montierten Blinkerhalter. Die Blinkerverlängerung entfällt. Jeweils eine U-Scheibe ø10,5 und Karosseriescheibe ø6,4 x ø18 unterlegen. Zur Verschraubung die Originalmutter M5 verwenden.

Die Blinkerkabel werden durch die untere Öffnung des Nummernschildträgers und dann wie original verlegt.
Sie müssen nicht verlängert werden.

je 2x



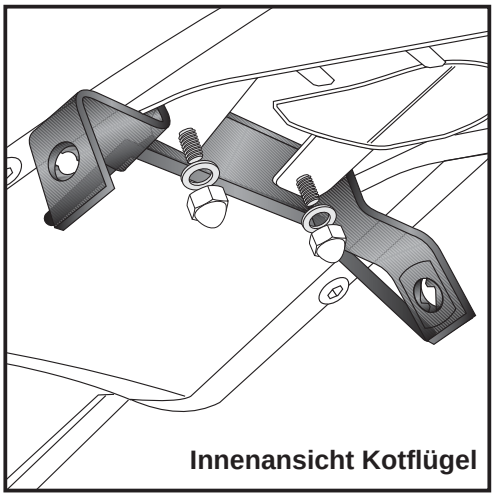

Innenansicht Kotflügel

5

Montage des Adapterbügels:

Den Nummernschildträger wieder montieren.

Dabei auf der Kotflügelinnenseite den Adapterbügel zwischen Kunststoffteil und Metallverstärkung des Nummernschildträgers verschrauben.
Von oben die Inbusschrauben M8 x 30 mit U-Scheiben ø8,4 durchstecken und von unten die Original-Hutmuttern benutzen.



je 2x

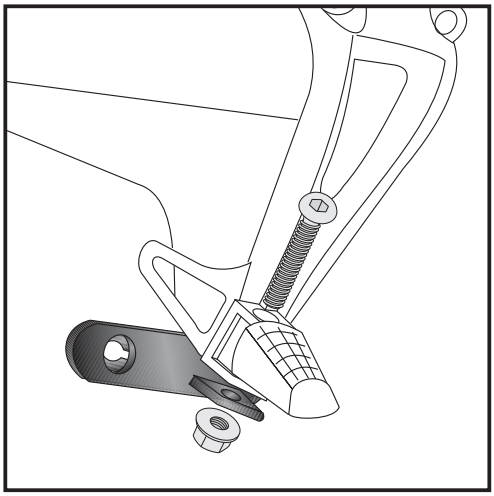

6

Montage der Adapterlaschen unten links und rechts:

Diese werden an den Soziusfußrasten befestigt.
Dazu die Haltebolzen der Fußrasten ausbauen und durch die Linsenkopfschrauben M8 x 45 ersetzen.
Adapterlaschen auf das überstehende Gewinde schieben und mit Tensilockmutter M8 verschrauben.



je 2x



Montage

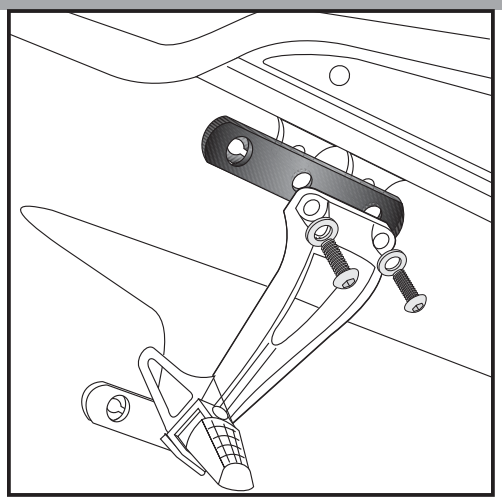

7 Rechte Seite

Befestigung der Adapterlasche oben rechts:
zwischen Rahmen und Soziusfußrastenausleger mit der Linsenkopfschraube M8 x 30 und U-Scheibe ø8,4.
Dazu den Fußrastenausleger demontieren, die Originalschrauben entfallen.

 **je 2x** 

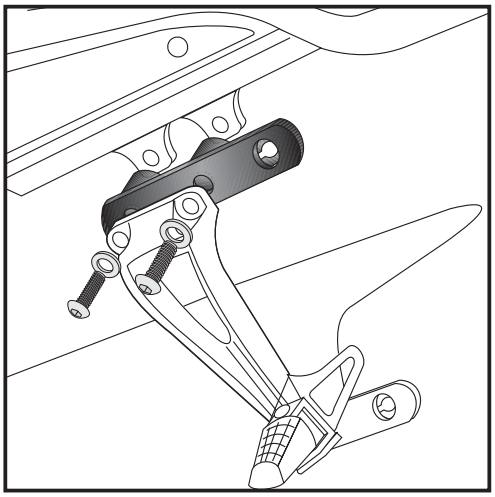

8 Linke Seite

Befestigung der Adapterlasche oben links:
Diese Adapterlasche verfügt über angeschweisste Distanzen.
Montage zwischen Rahmen und Soziusfußrastenausleger mit der Linsenkopfschraube M8 x 40 und U-Scheibe ø8,4.
Dazu den Fußrastenausleger demontieren, die Originalschrauben entfallen.

 **je 2x** 

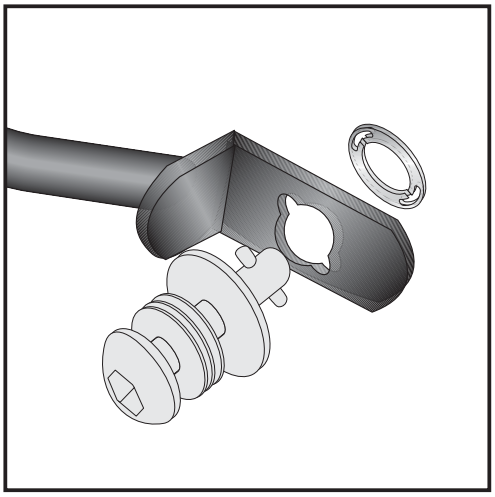

9

Montage der Lock it System-Schrauben:
An den Kofferträgern links / rechts werden die Lock it System-Schrauben an den Befestigungslaschen mittels der Sicherungsscheibe montiert.
Die Scheiben und Lock it System-Schrauben verbleiben bei Demontage an den Befestigungspunkten der Kofferträger.

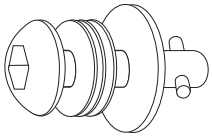 **6x** 

Montage

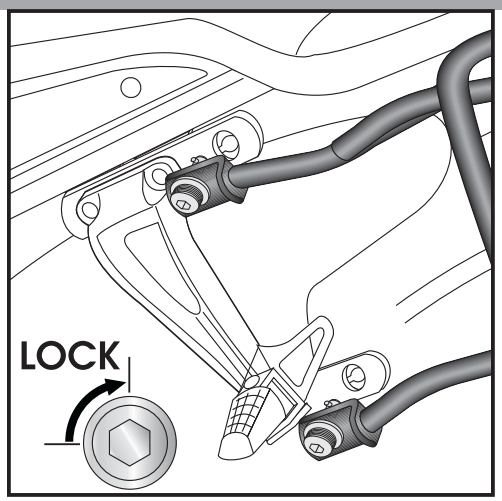

10

Montage der Kofferträger links / rechts:
Die vorbereiteten Kofferträger werden an den Haltelaschen mittels der Lock it System-Schrauben befestigt.

ACHTUNG:
Lock it System-Schrauben nicht überdrehen !
Langsam drehen (Viertelumdrehung) bis die Schraube fühlbar einrastet und am Anschlag anliegt.

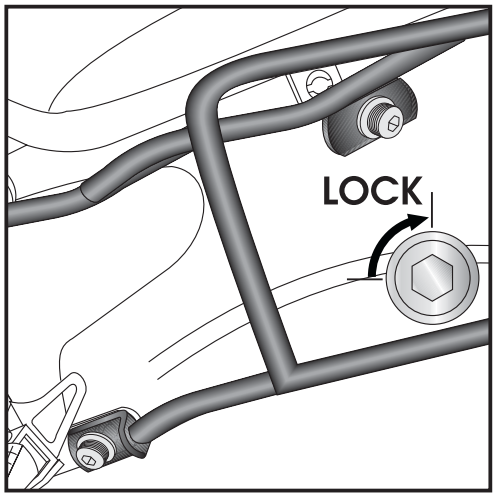

11

Montage der Kofferträger links / rechts:
Die vorbereiteten Kofferträger werden an den Haltelaschen mittels der Lock it System-Schrauben befestigt.

ACHTUNG:
Lock it System-Schrauben nicht überdrehen !
Langsam drehen (Viertelumdrehung) bis die Schraube fühlbar einrastet und am Anschlag anliegt.

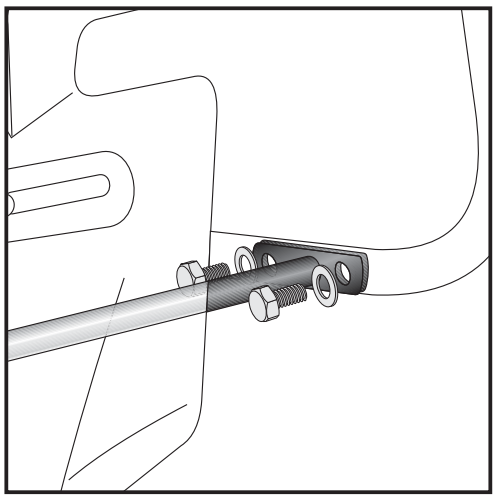

12

Befestigung des Querbügels:
Diese verläuft innen hinter dem Nummernschildhalter.
Der Querbügel wird an den Gewindebohrungen der Kofferträger mit den Sechskantschrauben M 6 x 12 und U-Scheiben ø6,4 verschraubt.

 **4x** **4x**

Kofferträger
YAMAHA FZ 1 Fazer ab 2006

Artikel-Nr.:
650.4522.00 01 schwarz

Lock it System

HEPCO & BECKER

Montage

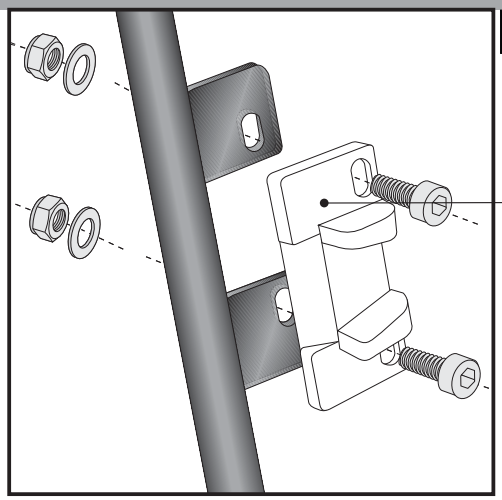

13

Hinweise zur Koffermontage

Montage des Metalladapters zum Einhaken des Kofferhalteschlosses

HINWEIS :
die Metalladapter liegen den Koffern bei, nicht diesem Kofferträgerset.

Die notwendigen Schrauben zur Montage der Metalladapter am Kofferträger sind beigefügt (Inbusschrauben M6 x 16, U-Scheiben ø6,4, selbstsichernde Muttern M6).



je 4x

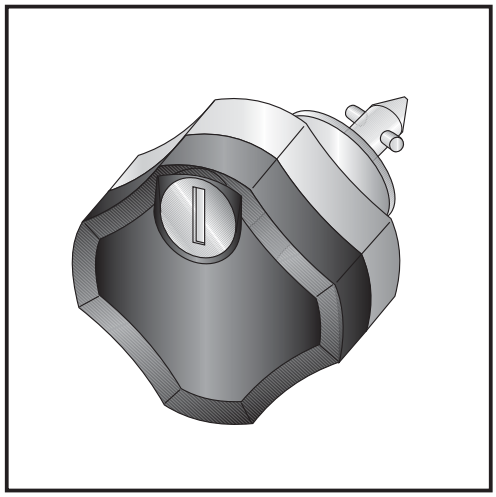

Diebstahlschutz

Die optional unter der Bestell-Nummer: 151.050 erhältlichen abschließbaren Lock it System-Schrauben stellen einen wirksamen Diebstahlschutz des Kofferträgers dar.
Es wird empfohlen, pro Seite eine normale Lock it System-Schraube durch diese abschließbare Schraube zu ersetzen.

Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigefügten Serviceinformationen.

Als weiteres Zubehör lieferbar:

501.420 01 01 Motorschutzbügel schwarz

Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: +49 (0)6331 - 1453 - 100
Fax: +49 (0)6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Side carrier
YAMAHA FZ 1 Fazer from 2006

Item - No.:
650.4522.00 01 black

Lock it System

Assembling instructions

Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Quad parts
Accessories

HEPCO & BECKER

The kit includes the following parts:

Quant	item no.	description
1	704.079HB	carrier left
1	704.080HB	carrier right
1	704.294HB	mounting bracket
1	704.295HB	blinker mounting
1	704.296HB	mounting adapter left, bottom
1	704.297HB	mounting adapter right, bottom
1	704.298HB	mounting adapter left, top
1	704.299HB	mounting adapter right, top
1	704.300HB	bracing bow
2	150.892	filister head screw M 8 x 45
2	150.886	filister head screw M 8 x 40
2	150.923	filister head screw M 8 x 30
2	150.891	filister head screw M 8 x 25

Quant	item no.	description
4	151.139	hexagon bolt M 6 x 12
2	150.784	allen screw M 8 x 30
4	150.761	allen screw M 6 x 16
6	151.070	lock it screw
6	151.071	lock washer
8	150.809	washer ø6,4
8	150.810	washer ø8,4
2	150.995	washer ø8,4 x 3mm
2	150.811	washer ø10,5
2	150.706	body washer ø8,4 x ø30
2	150.986	body washer ø6,4 x ø18
4	150.799	self-nock nut M6
2	150.800	self-nock nut M 8
2	150.803	tensilock nut M8

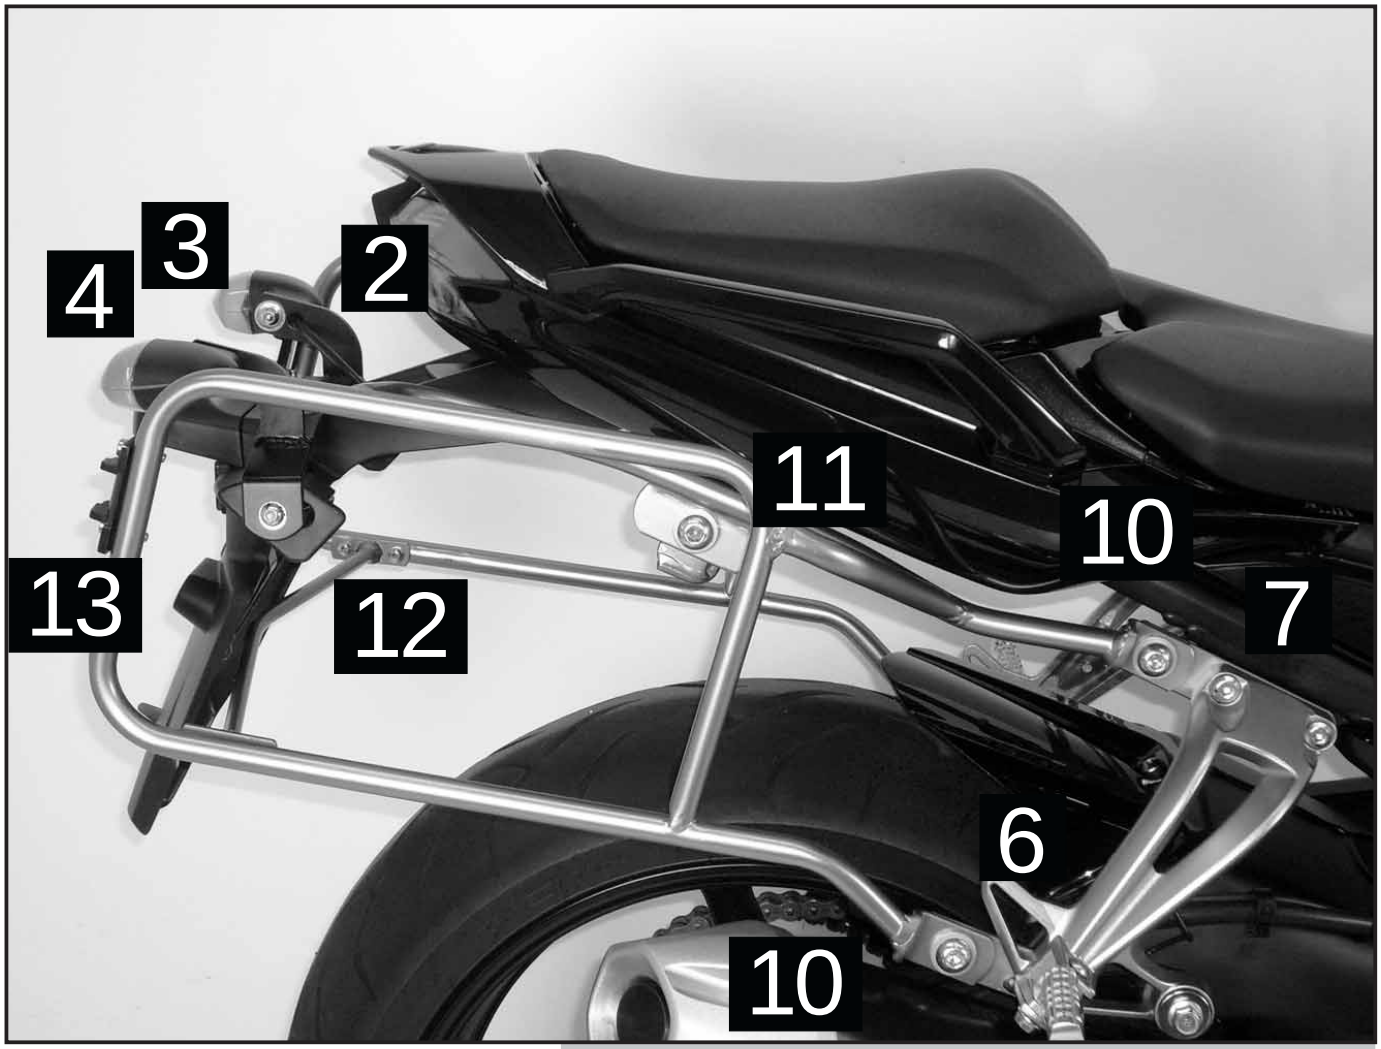

Side carrier
YAMAHA FZ 1 Fazer from 2006

Item - No.:
650.4522.00 01 black

Lock it System

Assembling instructions

HEPCO & BECKER

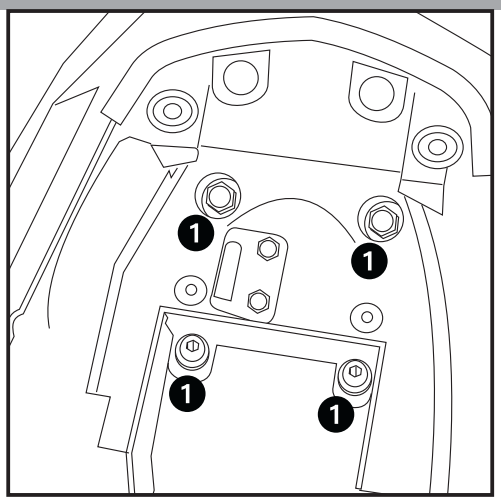

1

Preparing:
Unmount seat.
Unmount number plate holder (screws marked with ❶)

Tip:

Fit all parts and srew on not too strong.
After mounting all parts, the screws should be tightened to the torque specified.
This guarantees, that the kit is mounted without tension.

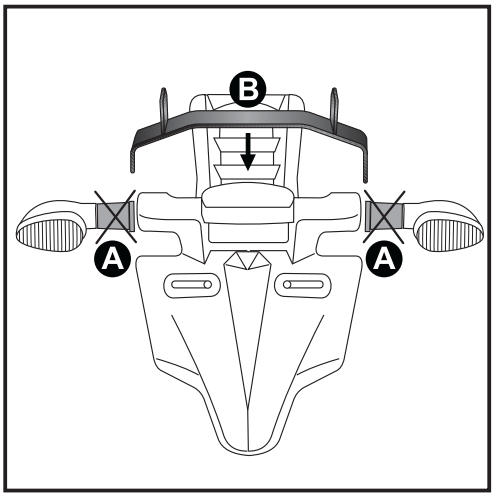

2

Unmount blinker.
The rubber parts of the blinker Ⓐ are not needed any more.
The blinker mounting will be placed instead of the blinkers. Ⓑ

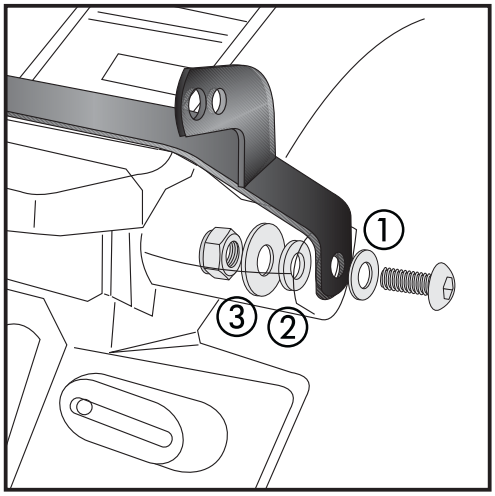

3

Fastening of the blinker mounting:
At the inner side:
use washer ø8,4 x 3 mm, body washer ø8,4 x ø30 and self-lock nut M8.
Outside use washer ø8,4 and filister head screw M8 x 25.

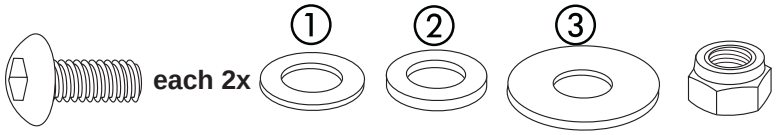

Side carrier
YAMAHA FZ 1 Fazer from 2006

Item - No.:
650.4522.00 01 black

Lock it System

Assembling instructions

HEPCO & BECKER

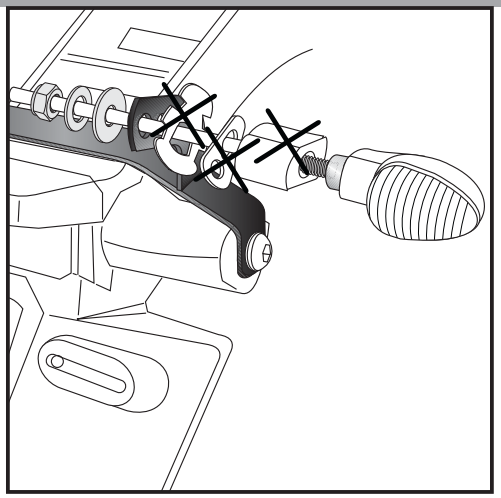

4

Fastening of the blinker:
with original nut at the blinker mounting.
Sandwich a washer ø10,5 and a body washer ø6,4 x ø18.

each2x



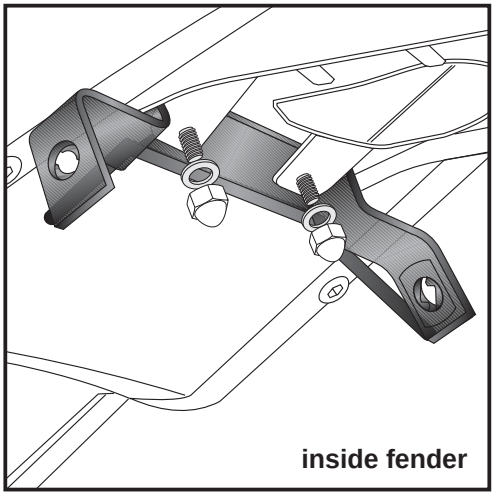

5

Fastening of the mounting bracket:
Mount number plate holder again.
Sandwich mounting bracket between plastic and metal of the number plate holder.
Use allen screws M8 x 30 with washers ø8,4 from above and inside fender the original cap nuts.



each 2x

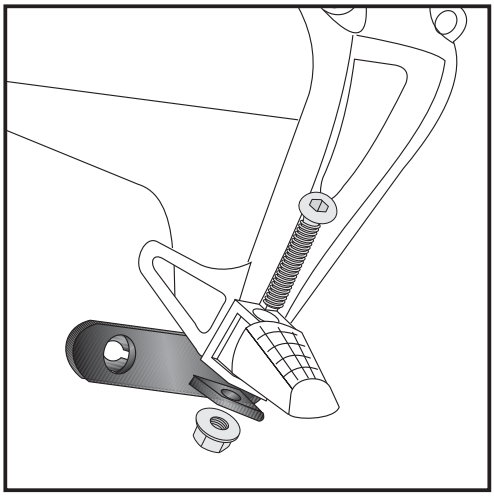

6

Fastening of mounting adapter left, bottom:
At the footrest brackets.
Use filister head screw M8 x 45 and tensilock-nut M8.
Original bolt is not needed any more.



each 2x



Side carrier
YAMAHA FZ 1 Fazer from 2006

Item - No.:
650.4522.00 01 black

Lock it System

Assembling instructions

HEPCO & BECKER

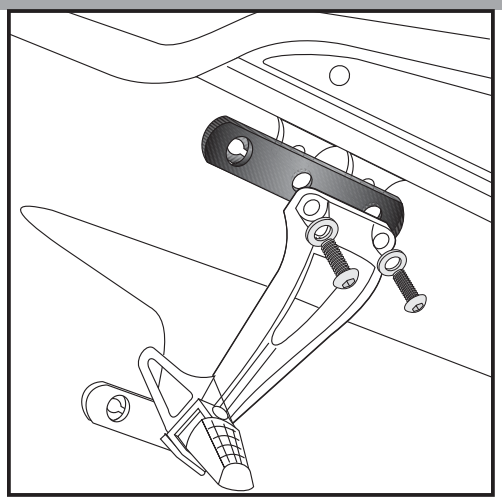

7 right side

Fastening of mounting adapter right, top:
Between frame and footrest bracket holder.
Use filister head screws M8 x 30 and washers ø8,4.
Original screws are not needed any more.



each 2x



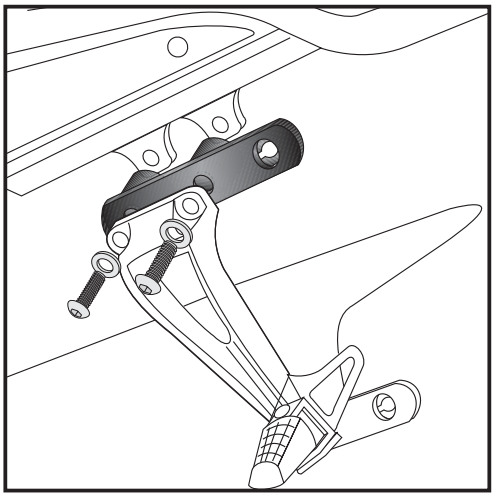

8 left side

Fastening of mounting adapter left, top:
Between frame and footrest bracket holder.
The left mounting adapter has integrated spacers.
To fix, use filister head screws M8 x 40 and washers ø8,4.
Original screws are not needed any more.



each 2x



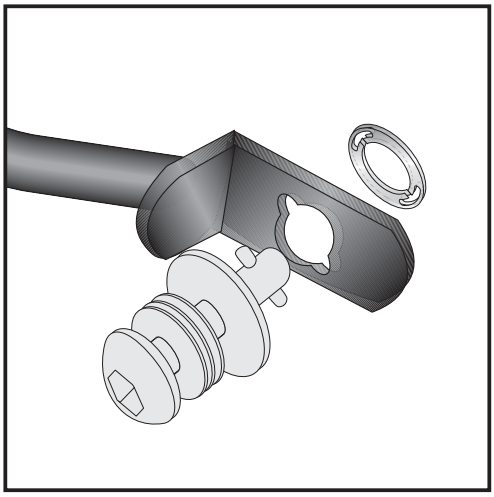

9

Fastening of Lock it screws:
The Lock it screws will be fixed at the carriers left and right with lock washers.

You have to do it only once - the srews and lock washers remain at the carriers.

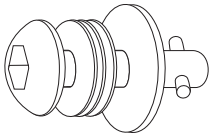

6x



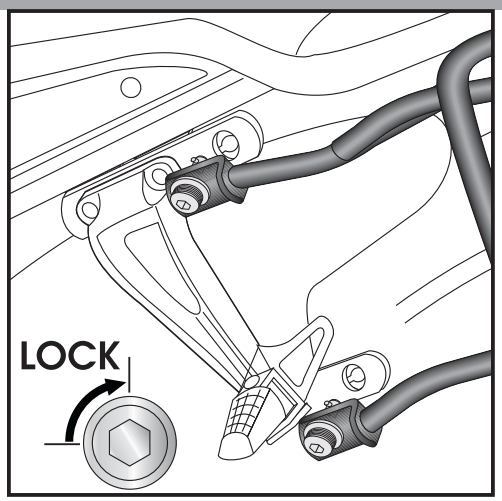

10

Fastening of carrier :
The carriers will now be fixed to the adapter with Lock it -screws

Attention !
Don´t overturn the Lock it screw !
Rotate slowly one quarter of a turn until screw engages.

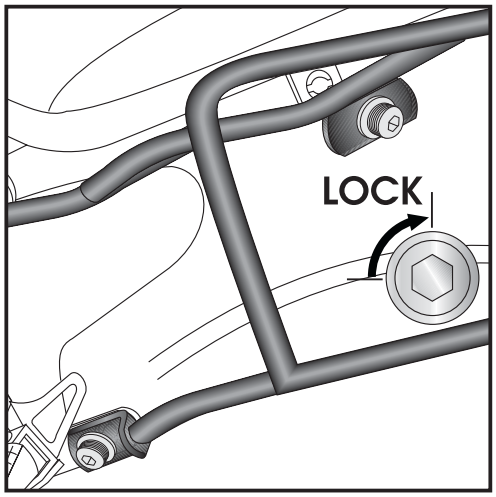

11

Fastening of carrier :
The carriers will now be fixed to the adapter with Lock it -screws

Attention !
Don´t overturn the Lock it screw !
Rotate slowly one quarter of a turn until screw engages.

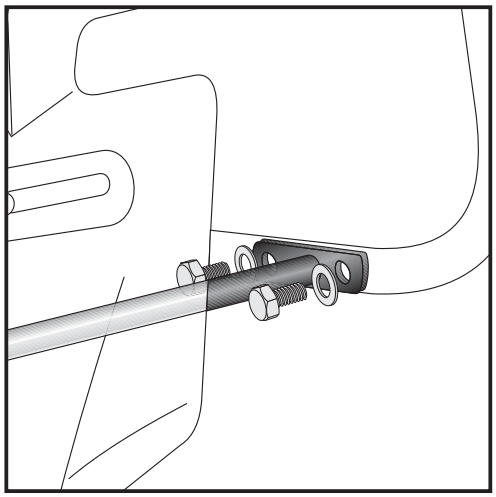

12

Fastening of the bracing bow:
Inside the fender with hexagon bolt M 6 x 12 and washers ø6,4.
Use the threads at the inner side of the side carriers.

 **4x**

4x

Side carrier
YAMAHA FZ 1 Fazer from 2006

Item - No.:
650.4522.00 01 black

Lock it System

Assembling instructions

HEPCO & BECKER

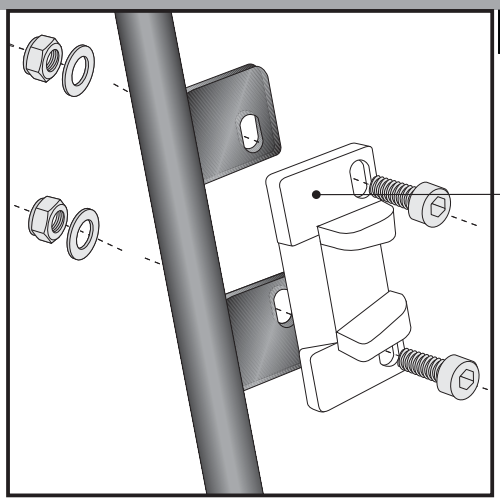

13

Hint: assembling side cases

Fastening of adapter to hook in the fixing lock

Hint :
The adapters are enclosed with the side cases.
They are not included in the side carrier set.

The necessary srews for mounting the metal adapter on the carrier are part of this set.
(Filister headscrew M6 x 16, washer ø6,4 and self lock nut M6).



each 4x

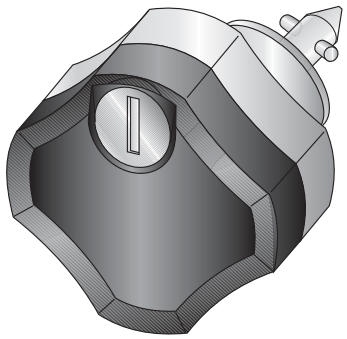

Anti-theft-device

Sold separately - item-no: 151.050
It is recommended to use one on each side of the side-carrier, instead of the ordinary lock-it screw, for theft protection.

Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

Also available:
501.420 01 01 Engine guard black

Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: +49 (0)6331 - 1453 - 100
Fax: +49 (0)6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de